


Operation 6004

ritëtemp®

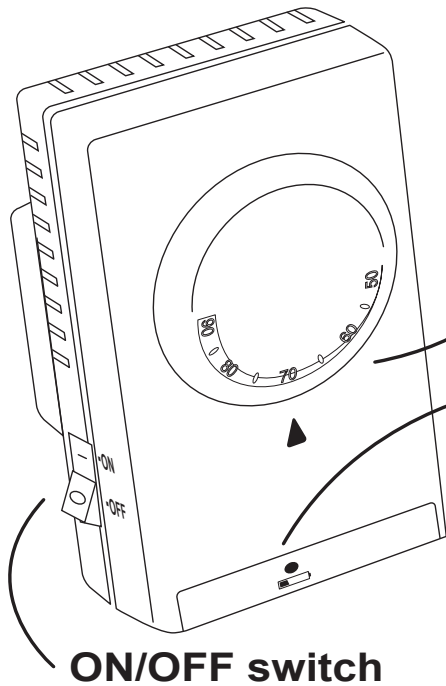

This unit is a 110/220 AC heater thermostat unit and cannot control a cooling system.

Temperature Dial
Low Battery Indicator

Statement of use: The 6004 can be used with most 120/208/240 volt electric heating devices. It provides Line voltage control for radiant cable, electric baseboard, and resistive-rated fan forced heaters within the ratings listed. Electrical Rating: 120/208/240Vac; 16A max load

Operation

- Switch the ON/OFF switch to ON.
- Turn the Temperature dial to select the desired temperature. Higher temperature - **counter clockwise**
Lower temperature - **clockwise**

NOTE: LED blinks when batteries are low.
Caution: Heating system will stop when batteries die.

