 


# Operation 6035

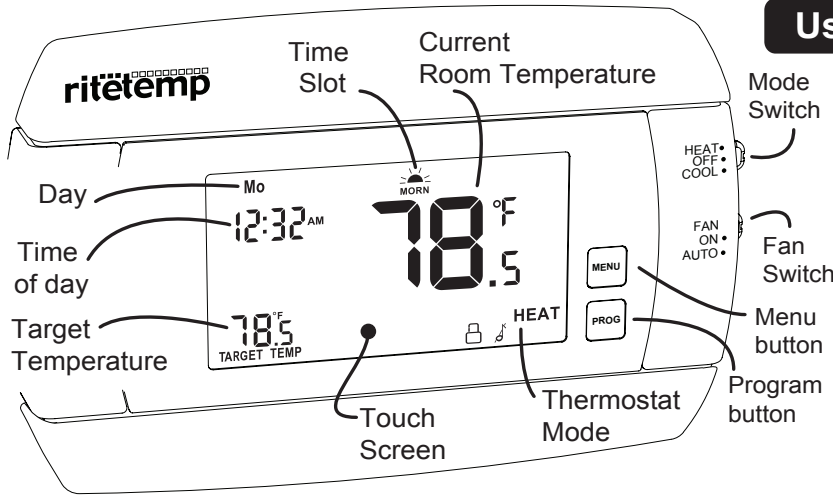

## Using a TOUCH SCREEN

Please take a moment to try out your touch screen itself.

To select a function on the touch screen, place your finger on the main temp display and give a short firm push. Try a "tap" of the finger or stylus. Your input must last long enough for the system to determine it is not an accidental 'bump'.

Using the stylus is more comfortable for some users. Again allow the system enough time to recognize your inputs.


When you are comfortable with touch inputs, proceed.

 
Statement of use: The 6035 can be used with millivolt, 24VAC, single and 2 stage conventional systems, gas/oil/electric heat, 1 stage heat pumps, 2 stage heat pumps, zoned hot water (2 or 3 wire), zoned forced air, single and 2 stage cooling and hybrid systems.

## Basic Screens

The **MODE SWITCH** of the 6035 must be in the **HEAT** or the **COOL** position to access all control functions. The 6035 Thermostat has 3 basic screens.

The **HOME** screen is displayed when unit is operating your system.

Touching the  will always return you to this screen.

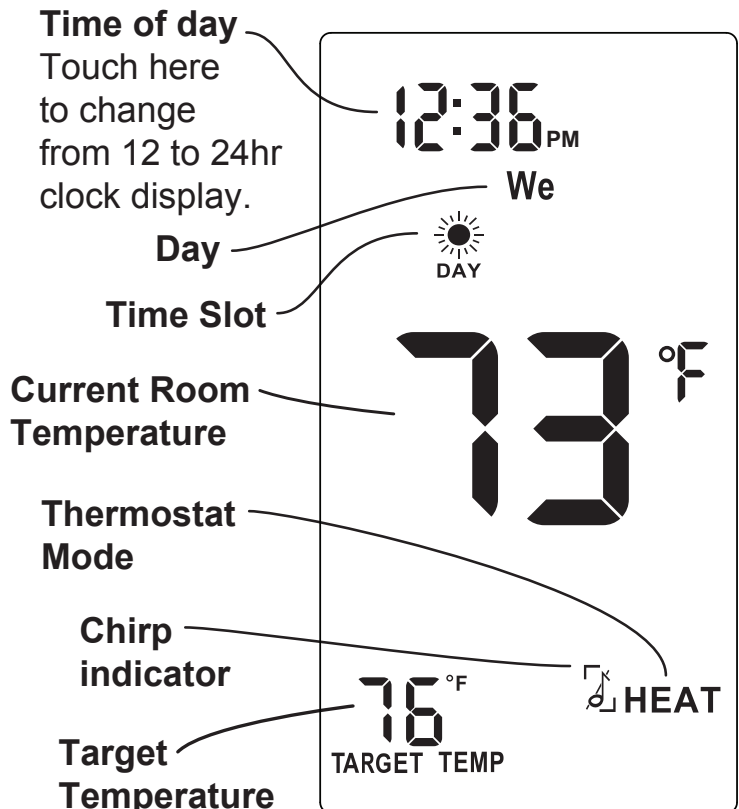

# MENU screen

Displayed when the MENU button is pressed.

**Set °C -°F**  
Touch this to set temperature display.

**Lock Program**  
Touch for 2 sec to lock or unlock

**Calibration controls**  
Use the + and - to calibrate your LCD display match to another thermometer.

 
**Set Time**  
Touch this area to set the time of day. Left arrow goes back, right arrow goes forward.

**Set Day**  
Touch this area to set the day of the week.

**Temperature Swing set**

**Filter Timer set**  
**Chirp set**  
Touch this to turn the audible chirp on or off.

**Calibration indicator**  
This shows if you have altered the calibration of your unit

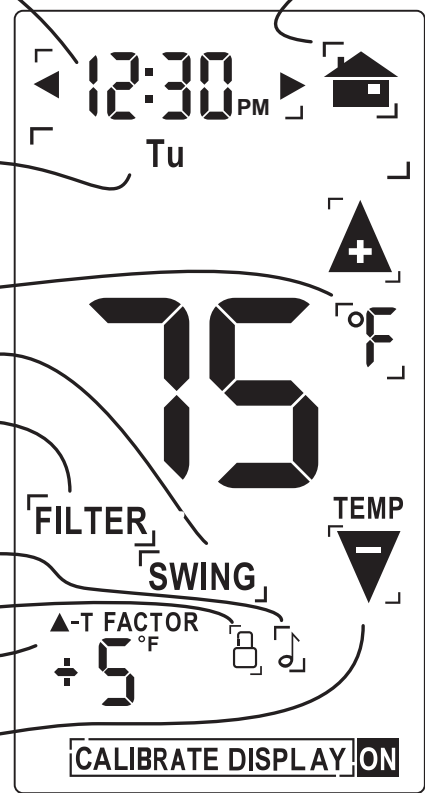

# PROGRAM screen

Displayed when the PROGRAM button is pressed.

**Set Program Time**  
Touch this area to set the time of day you want each time period to start. Left arrow goes back, right arrow goes forward.

**Copy**  
Touch this area to copy current program to the next day

**EPA**  
Touch and hold for 5 sec to return to EPA Energy-Star prog

 
**Set Program Day**  
Touch this area to set the day of the week you want to program Target Temps for.

**Set Time Slot**  
Touch this area to set the Time Slot you want to program.

**Review**  
touch this area to auto cycle through your program

**Temp Up / Temp Down**  
arrows. Touch these to raise and lower each Target Temp.

**Return HOME**

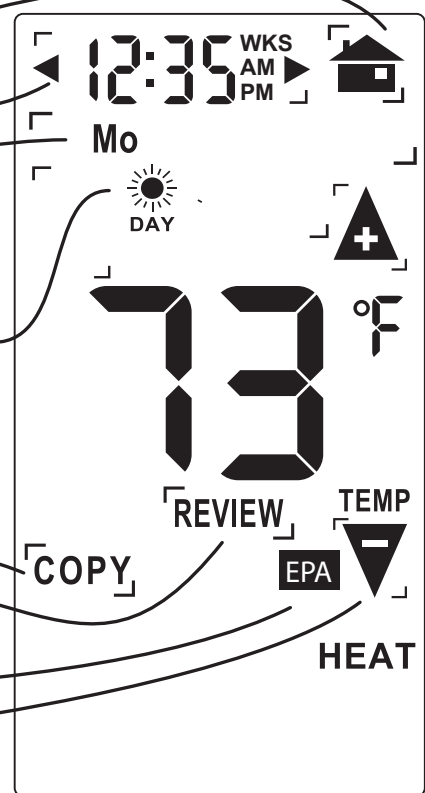

### Configure

**NOTE:** The Mode Switch must be in **HEAT** or **COOL** mode to configure.

 
Press **MENU** to configure the thermostat (from HOME screen).

#### Set day of the week -

Touch the **Day of the week** area to cycle through the **Su Mo Tu We Th Fr Sa** days of the week to select the current day.


#### Set time of day -

Touch the **Time of Day** arrows to move the time selection forward or backward until it displays the current time. Touch and hold for faster setting.

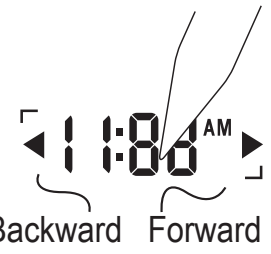


#### Set °C -°F display

 Touch the °F and it will toggle to °C.

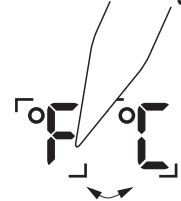


#### Set audible chirp -

 Touch the the musical note icon to select the chirp or no chirp.

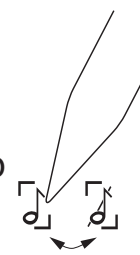

 **EPA** - Touch and hold for 5 sec to return to EPA Energy-Star program



**Return HOME** by touching the home icon.

### Auto-run

This Thermostat comes preprogrammed with an Energy-Star™ approved program. This program is recommended by the EPA for energy efficiency.



We strongly recommend that you Auto-Run this program for one week, and see if it works for you. If it does not fit your needs you can always input a custom program.

- To Auto-Run the Energy-Star™ program, select HEAT or COOL with the mode switch. The unit is now running the Energy-Star™ program.
- The clock is displayed on the left. The ambient temperature is displayed in the the center of the LCD touch screen. The TIME SLOT icon indicates the TIME SLOT active in the Energy-Star™ program.
- The programmed temperature is shown on the lower right. For program details refer to the Energy-Star™ program chart below.

EPA	MORN	DAY	EVEN	NITE	MORN	DAY	EVEN	NITE	
<b>HEAT</b>	6:00am	8:00am	6:00pm	10:00pm	<b>COOL</b>	6:00am	8:00am	6:00pm	10:00pm
All Days	70°F	62°F	70°F	62°F	All Days	78°F	85°F	78°F	82°F

**NOTE: 60 Second Rule-During** programming, if a button is not pushed in 60 seconds, the unit will return to the home screen. Everything you have changed while programming will automatically be saved.

**Select HEAT with the HEAT/Cool MODE switch.**  
**Press PROGRAM to go to the programming screen.**



**Select the day you want to program-**

Touch the **Day of the week** area to cycle through the days of the week to select the desired day.

**Select the time slot you want to program -**

Touch the **Time slot** area to cycle through the 4 time slots, until it displays the desired time slot.



**Select the time of day -**

 
Touch the **Time of Day** arrows to move the time selection forward or backward until it displays the desired time. Touch and hold for faster time set.



**Program cont.**

**Select the desired temperature -**

Touch the **UP temp / Down temp** arrows.

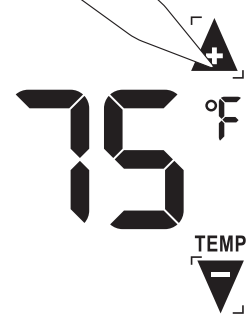

Repeat the above procedures for each day of the week and each time slot of the day as desired.

**To REVIEW** your program touch **REVIEW**. Each time slot for each day or set of identical days, will be displayed every 3 seconds.

**Return HOME** by touching the home icon.



**To COPY the program from the current day to another day -**

Touch **COPY** on the program screen. The current day will remain solid, the destination day will flash.

Touch the day area to advance the day and select a copy destination.

Touch **COPY** again to copy all settings to the destination day.



**To program for cooling -**

Select **COOL** with the Heat/Cool MODE switch and repeat the above procedure.

 
The 6035 has 3 manual override commands. These are accessed by touching the Current Temp Display at the HOME screen (center of screen).

**HOLD**  
Touch this area to set a comfortable target temp for the system to hold until you return and remove **HOLD**.

**Target Temperature**

**Manual Override indicator**  
Shows TEMPORARY when you have modified the Target.

**Temp Up / Temp Down arrows**  
Touch these to raise and lower the manual override Target Temp.

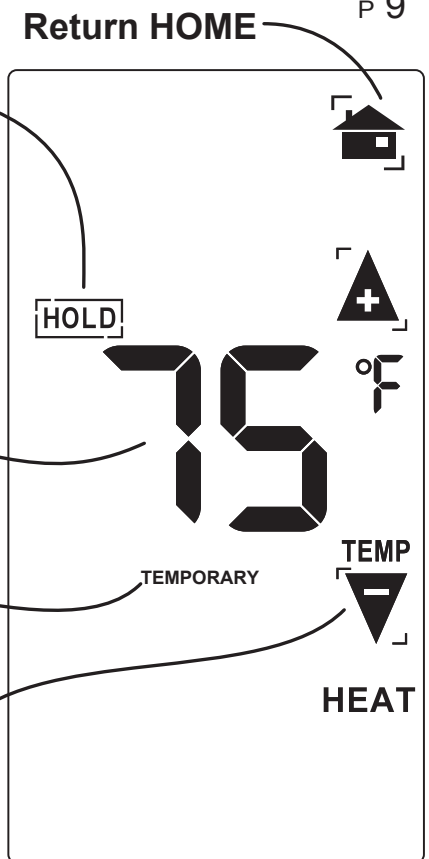

Manual cont.

**NOTE:** The Mode Switch must be in **HEAT** or **COOL** mode to override.

Temporary **OVERRIDE** -

- At the Manual override screen, Touch the **Temp Up / Temp Down** arrows to select your desired temporary Target Temperature.
- Touch HOME to return to operation.

 
 
The **OVERRIDE** icon will go on indicating you have modified the Target Temp for the current Time Slot only (see PG7-Time Slot).

**HOLD** -

- At the Manual override screen, Touch **HOLD** to initiate a hold temperature.
- Touch the **Temp Up / Temp Down** arrows to select your hold temperature.
- Touch HOME to return to operation.

The **HOLD ON** icon will flash indicating you have changed the Target Temp.

The system will **HOLD** this temperature until you return to this screen and *de-select* **HOLD**, by touching the **HOLD** icon again.

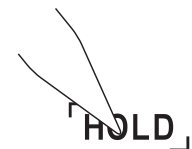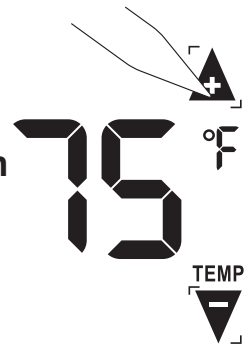

## Special Features

P 11

### Swing

Swing setting determines the temperature difference in degrees from ON to OFF that the thermostat will command the HVAC system to run.

With the MODE switch in HEAT or COOL, press the **MENU** button.

Touch the **SWING** icon and the current setting of temp swing is shown on the display (default at .5°).

To change the swing factor, touch the left or right arrows.

The furnace will cycle more at the lower numbers as it tries to maintain your temp.

SWING

◀ .5 ▶

### Low Battery

When the batteries are low, the battery icon will flash. The two AAA Batteries in the unit need to be replaced.

In some installations your heater system will stop functioning when the thermostat loses power. **Replace batteries as soon as you see this warning.** The thermostat programs will remain for 60 seconds while the batteries are changed.

**Do not take longer than 60 sec** to change the batteries in your unit or you will lose all custom settings and all programming. Only the **EPA Energy-Star™** program will remain. Once the batteries are replaced, the system will return to normal in 2 seconds.



## Spec. Featr. cont.

### Lock

**Allows you to prevent any changes in custom settings.**

To Lock Level1, touch the LOCK icon on the MENU screen for 2 sec.

Level1 allows temporary target adjustments but no program changes

To Lock Level2, touch LOCK icon for 2 sec. Level2 allows no changes.

To unlock, Touch the locked icon for 2 sec.



### 12/24 hour

The thermostat can display time in 12 or 24 hour formats.

At the HOME screen touch the time to toggle from 12 to 24 hr display.

### Filter Timer

**The 6035 has a feature that keeps track of actual furnace run time and reminds you to periodically replace your system's air filter.**

Press **MENU** (from HOME screen) and touch **FILTER** icon.

This will display your accumulated filter run time in weeks.

To zero the filter timer for a new filter, touch the accumulated time display.

To input a new filter life time, touch the **FILTER** icon for 3 seconds.

Input the lifetime in weeks for your new filter.

To leave the filter display, touch **HOME**.

FILTER

◀ 25 WKS ▶

 
P 12

## Heat Pump Features


If you have configured your 6035 for heat pump control the MENU screen will display an additional icon - the HEAT PUMP ON/OFF icon.

When using a heat pump with Auxiliary heat, if the heat pump cannot keep up and/or is defective, touch the **MENU** button, then touch **PUMP ON**; the **PUMP OFF** icon will come on. The aux heat will then be your only source of heat.

When the heat pump is again operational, be sure to turn the heat pump back on by touching **MENU** and then **PUMP OFF** (off icon goes out) as the aux heat is more expensive than pump heat.

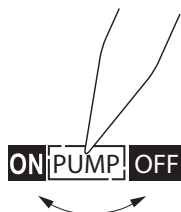


HEAT PUMP ON/OFF ICON

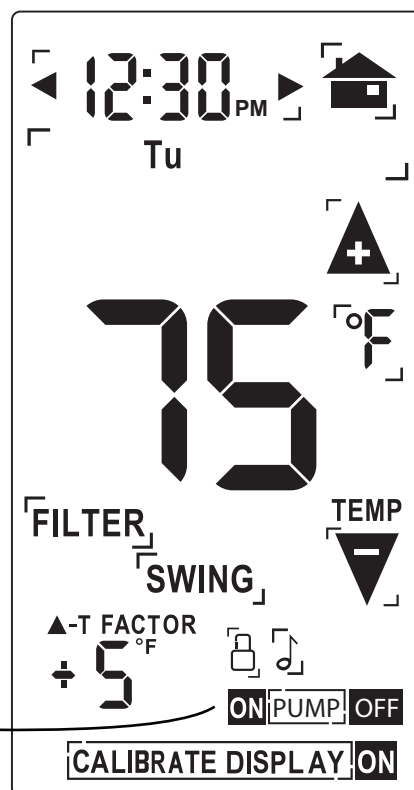 

MENU screen

## 6035 Features

 This thermostat can be used with all millivolt and 24VAC heating and cooling systems. It cannot be used with line voltage systems. This thermostat is digital and your desired heat or cool temperatures can be easily be set on the large touch screen with the UP/DOWN arrows. A minimum 4 minute off time protects heating and cooling systems from damage.

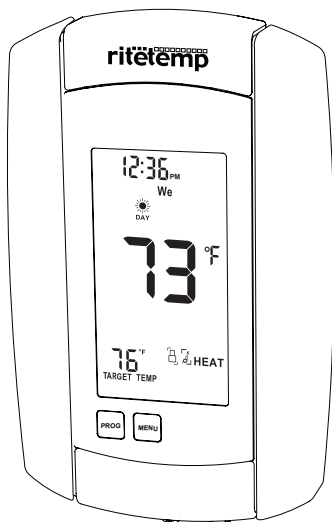

This thermostat uses a new technique called sequential staging for more comfort with faster reaction to requested temperature changes.



NOTE: Your thermostat comes from the factory calibrated to + or - 1<sup>o</sup>F actual temperature. It is an accurate instrument. If you want your thermostat to display the same temperature as another thermometer in your home, you can adjust it. Maximum calibration is +/-6<sup>o</sup>.

To change the calibration:

 
With the switch MODE in HEAT or COOL.

Press the **MENU** button.

Press the Temp Up/Temp Down arrows to adjust the temperature reading.

**CALIBRATE DISPLAY ON** will appear.

Press **HOME** to save the new setting.

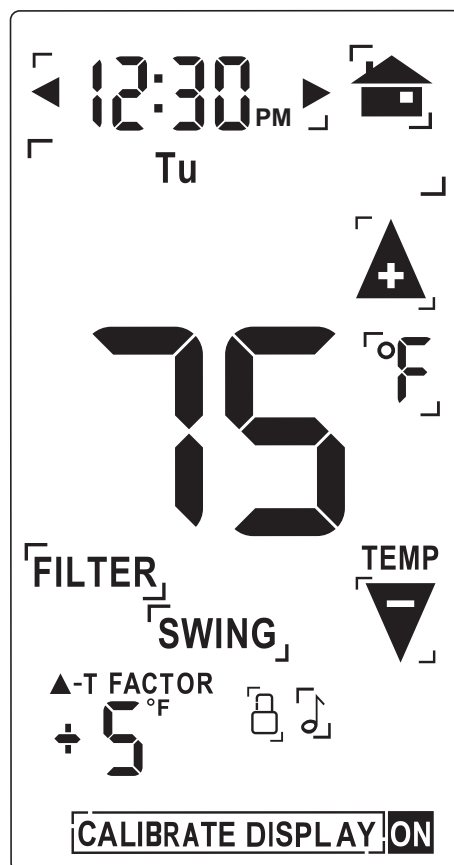

Customer Support: 877-505-2353 or  
Visit our website [www.ritetemp-thermostats.com](http://www.ritetemp-thermostats.com)

Made in China

1611-027