
# **Operation 8025**

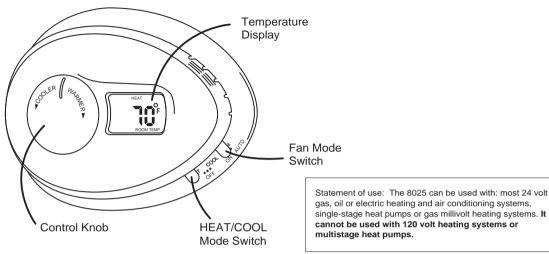



PG 1

## 1 Configure

• Set HEAT/COOL mode switch to HEAT or COOL. The unit will display the ambient temperature. Set the Fan switch to automatic.

### 2 Set Temp

• Turn the Control Knob to increase or decrease the TARGET TEMP. The TARGET TEMP will be displayed when your are adjusting the temp. (The display will return to show the current ROOM TEMP in a few seconds).

#### 3 Operate

• Your thermostat is now in operation.

In the **winter**, set the HEAT-COOL Mode switch to HEAT to control your heating system. In the **summer**, set the HEAT-COOL Mode switch COOL to control your air conditioner. In **spring** and **fall** or when windows are open, you can set the HEAT/COOL Mode switch to OFF.

Setting the FAN Mode switch to AUTO automatically runs your system's fan during heating and cooling.

Setting the FAN Mode switch to ON runs your system's fan continuously even without heating or cooling.

#### **4 Special Features**

#### C/F Select

Centigrade / Fahrenheit selection. The C/F jumper is on the back of the thermostat control unit it determines which temperature system is displayed on the LCD display.

- To change the °F / °C jumper. Separate the control unit from the wall mounted terminals.
- Locate the °F / °C jumper.
- Select the desired display mode.
- Press the internal RESET button and replace the control unit on the wall.

# Low Battery

When the batteries are low, the battery icon will come on and flash. The two AA Batteries in the unit need to be replaced. In some installations, your heater system will stop functioning when the thermostst loses power. Replace Batteries as soon as you see this warning. The thermostat setting will remain for 30 seconds while the batteries are removed and replaced.



PG 3

